SAM'S CLUB POPPER UniMaxx Kettle

 
Popcorn Machine Instruction Manual Model #2085CL





SAFETY PRECAUTIONS

A DANGER



Machine must be properly grounded to prevent electrical shock to personnel.

Do NOT immerse the kettle, warmer, or any other part of this equipment in water.

Always unplug the equipment before cleaning or servicing.



A WARNING

Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position

before plugging the equipment into a receptacle.



A WARNING

To avoid serious burns, do NOT touch the kettle while it is hot.



A WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.



A CAUTION

This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment.

Carefully read all installation instructions before operating the equipment.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

INSTALLATION

Your new 2085CL Popcorn Machine is completely assembled. Remove all Packing material and tape before starting operation.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

There are three switches on the popper.

<u>LIGHT AND WARMER SWITCH</u> Turns on the heat to the bottom corn pan and heat light. <u>KETTLE MOTOR SWITCH</u> Turns on the motor which drives kettle agitator shaft. <u>KETTLE HEAT SWITCH</u> Turns on the heat element

AMOUNT OF POPCORN AND OIL

Your new popper is equipped with a six ounce (177 ml) corn measure cup.

Corn charge - 6 oz. (177 ml) Oil charge - 1.6 to 2.0 oz. (60 ml) Flavacol - 1 tablespoon (8 cc)

POPPING INSTRUCTIONS



To avoid serious burns, do **NOT** touch the kettle while it is hot!

- 1. Turn KETTLE HEAT and KETTLE MOTOR switch ON.
- 2. Make test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
- 3. When the 3 kernels have popped, load kettle with corn and oil charge.
- 4. When corn has popped, dump kettle.

5. Repeat cycle starting with Item #3; always pop 3-5 batches for best popcorn.

CARE AND CLEANING

A WARNING



Unplug your machine before cleaning glass panels or case. Never immerse the kettle in water, this will ruin the electrical components and automatically void the warranty.

Each time you finish a series of poppings, allow the kettle to cool down, and wipe the outside of the kettle with a soft cloth to remove any oil drippage on the outside of the kettle. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.

Cleaning the cabinet of your machine is easy. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also.

NOTE: Never use a glass or plastic cleaner that contains ammonia. It will crack the plastic on the machine.

MAINTENANCE INSTRUCTIONS



A WARNING

Do not immerse the kettle, warmer, or any other part of this equipment in water. Always unplug your machine before servicing.



A WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

A CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE IN-TENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

ACCESSORIES

Description	Part Number	
Shipping Carton	49026	
Corn Measure Cup	49049	
Scoop	2071	
Flavacol Cup	47678	

ORDERING SPARE PARTS


- 1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
- 2. When ordering, please include part number, part name, and quantity needed.
- 3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
- 4. Address all parts orders to:

Parts Department Gold Medal Products Co. 10700 Medallion Drive Cincinnati, Ohio 45241-4807 (800) 543-0862 (513) 769-7676 Fax: (513) 769-8500 E-mail: info@gmpopcorn.com


or, place orders online at: Web Page: <u>www.gmpopcorn.com</u>

2085CL Cabinet Assembly – Front View



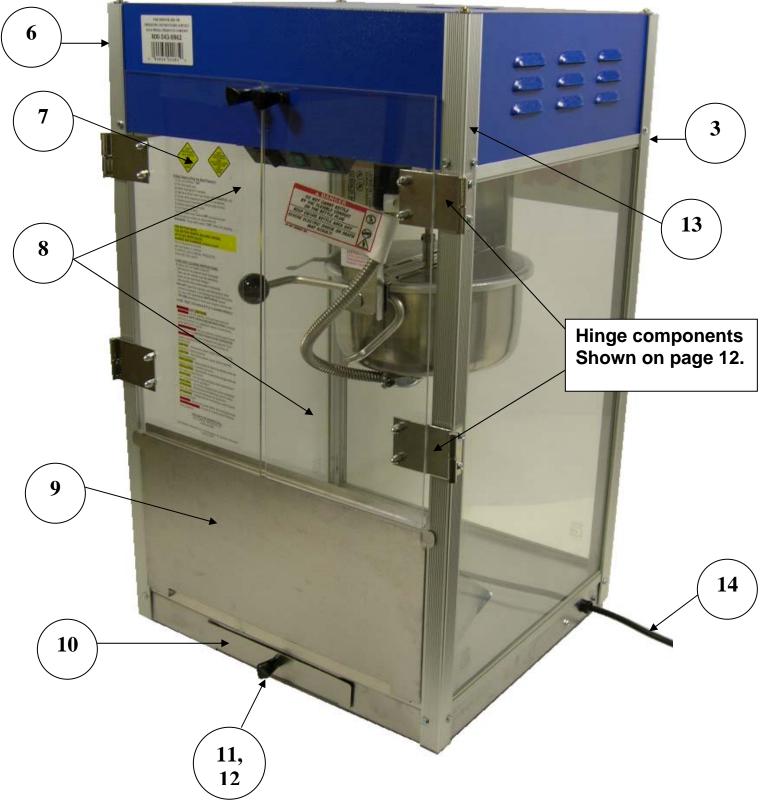

2085CL Cabinet Assembly – Rear View

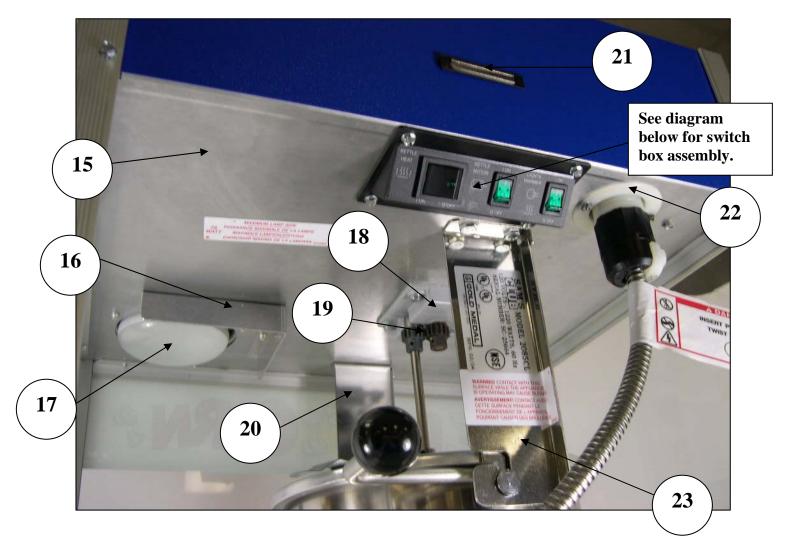


Inside Cabinet – Top View


Operating Switches – Close up




Inside Cabinet – Bottom View

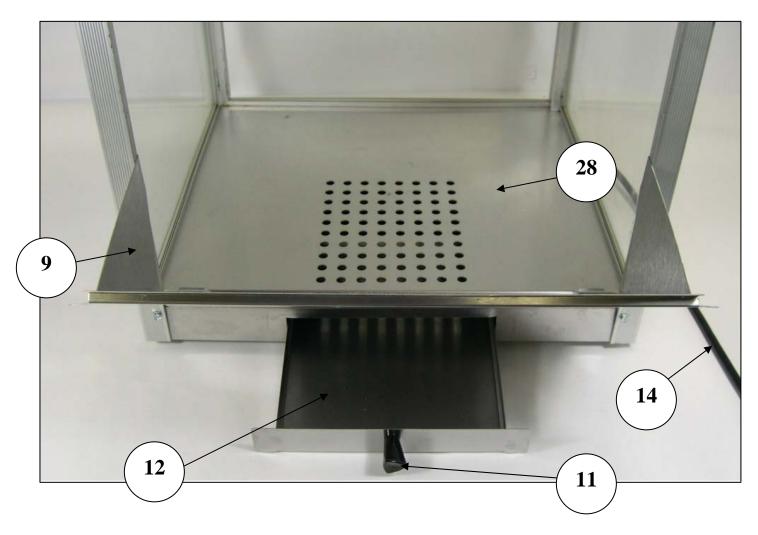


Warmer Assembly

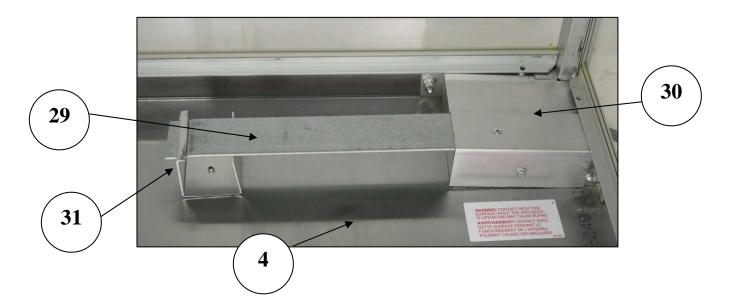

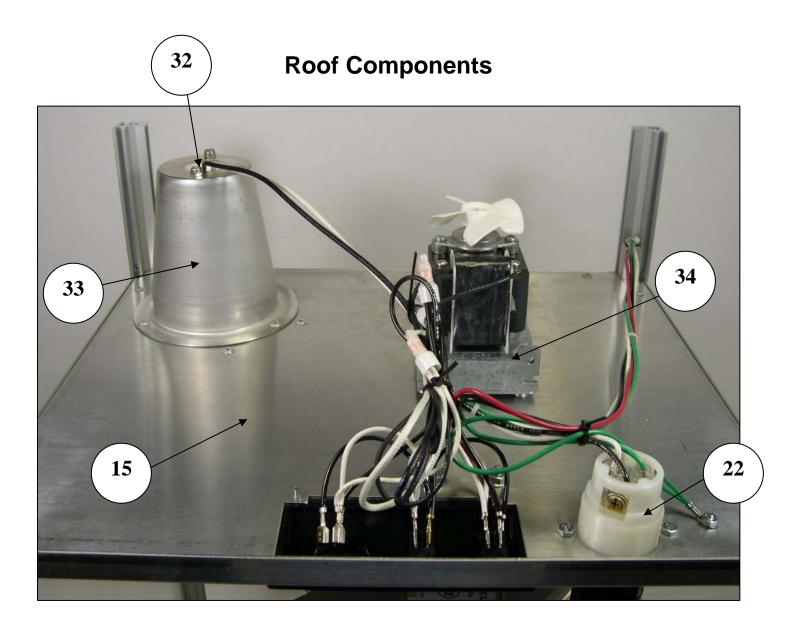

Door Hardware Kit – P/N 61380

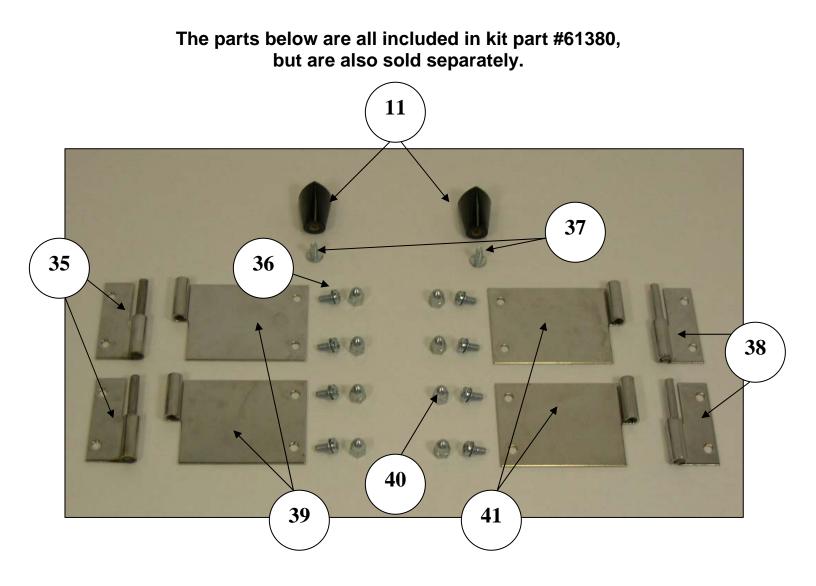


ltem #	Part Number	Description
1	49385	Blue Dome
2	49158	Decal - Front Glass
3	49515	Right Front Corner Post
4	49166	Bottom Pan
5	49516	Left Front Corner Post
6	49513	Left Rear Corner Post
7	41019	Door Decal
8	49395	Plexiglass Doors
9	49145	Drop Panel
10	49100	Old Maid Pan
11	47120	Knob
12	75267	Tee Bolt
13	49514	Right Rear Corner Post
14	22038	Power Supply Cord
15	49507	Motor Plate
16	47799	Light Shield Angle
17	41671	65W Flood Lamp
18	67194NM	Gear Block
19	47060	Spur Gear
20	49010	Front Hanger Arm
21	47561	Magnetic Catch
22	49330	Kettle Receptacle
23	49009	Rear Hanger Arm
24	48501	Switch Box
25	48502	Switch Box Label
26	42798	Large Rocker Switch
27	42532	Small Rocker Switch
28	49506	Bottom Corn Pan
29	49440	50W Strip Heater
30	49104	Corner Cover
31	49425	Strip Heater Bracket
32	47047	Lamp Holder
33	49480	Light Shield
34	47038	Kettle Drive Motor
35	41349	Left Hand Male Hinges
36	42227	8-32 x 3/8" Screws
37	75267	Tee Bolt
38	41350	Right Hand Male Hinges
39	61359	Left Hand Female Hinges
40	47702	8-32 Acorn Nut
41	61373	Right Hand Female Hinges

Parts List – Cabinet Assembly

6 oz. KETTLE ASSEMBLY (Complete Assembly #56000)



ELECTRICAL SCHEMATIC

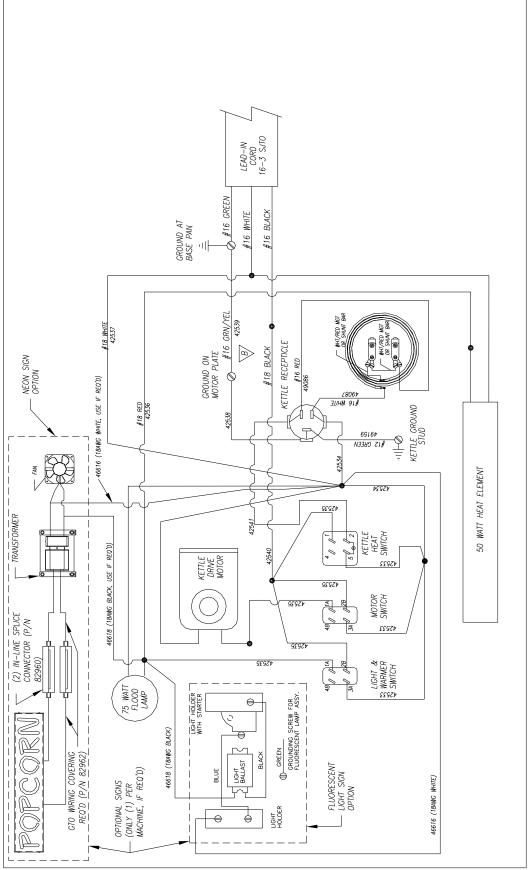

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTIBILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY 10700 Medallion Drive Cincinnati, Ohio 45241-4807 USA <u>www.gmpopcorn.com</u> Phone: 1-800-543-0862 Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.